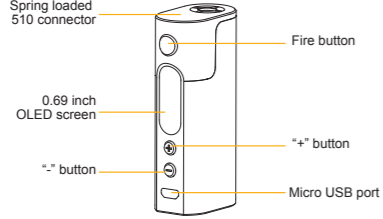



英文, 德文, 法文, 希腊文, 波兰文, 西班牙文, 荷兰文, 意大利文, 俄罗斯文
成品尺寸: 58*60MM
料号: 2-0025-0482-00

<p>aspire® Zelos 50W USER MANUAL</p>  <p>This product contains nicotine which is a highly addictive</p> <p>The above warning only applies when this device has been filled with nicotine containing e-liquid</p>	<p>Specifications</p> <p>Output wattage: 1-50W Output voltage: 0.5V-8.0V Resistance Parameters: VW/VV: 0.1-3.5ohms Bypass: 0.2-3.5ohms TC: 0.1-1.0ohms Continuous firing time is 10 seconds Firmware update: N/A Screen: 0.69 inch OLED screen Dimensions: 79*38*23mm Battery Type: Built-in LiPo Battery capacity: 2500mah</p>	<p>Instructions</p> <ul style="list-style-type: none">Pressing the fire button 5 times within 2 seconds to either lock or unlock the device. while the mod was locked, press the fire button for 3 seconds will turn the system off. To turn the mod back on press the fire button 5 times rapidly.Press the fire button 3 time rapidly when the mod is on will turn it into or out of stealth mode. While in stealth mode, the fire button still functions, but "+" and "-" buttons are all locked.Press "+" and "-" buttons simultaneously will allow you to select between VW, VV, Bypass and TC(Ni, Ti, SS) modes. Pressing "+" or "-" button to select modes, fire button to confirm.Pressing "+" and "-" buttons simultaneously to switch between VW, VV, Bypass and TC(Ni, Ti, SS) modes.Pressing "+" to increase wattage, voltage or temperature "-" button to decrease. Press "+" or "-" button longer will change the number faster.When the mod is in TC mode press fire button and "-" button simultaneously can go into wattage setting interface, in which users can adjust the output wattage under TC mode just by clicking "+" and "-" buttons, pressing the fire button to save the settings.When the mod is on, press fire button and "+" button simultaneously will lock or unlock buttons. When the buttons are locked, wattage, voltage and TC settings can not be adjusted.To change temperature to Fahrenheit(F) or to Celsius(C), press the "+" or "-" button all the way to pass the temperature range, the temperature will switch over to either Celsius or Fahrenheit automatically.The Zelos will enter its sleep mode when being idle for 1 minutes, while in sleep mode press the fire button will wake the device.	<p>Protection features</p> <ul style="list-style-type: none">Automatic Cut OffShort Circuit ProtectionLow Resistance ProtectionOverheat ProtectionOver charge ProtectionOver Discharge Protection <p>Charging instructions</p> <ul style="list-style-type: none">Charging the Zelos via Micro-USB charging port, the maximum current can reach up to 1A.Connect your Zelos mod to the charger and the screen will show a flashing battery icon. When the battery charge reaches 4.2V or is fully charged, the mod will stop charging and the screen will remain off. <p>* Keep out of reach of children and minors To learn more about your products and how to use, please visit: www.aspirecig.com</p> <p>Manufactured by Eigate MADE IN CHINA</p> 
---	--	--	---